# **OPUS-C-1500M3**



## **Technical Specification**

## Current Transducer OPUS-C-1500M3


## Features :

- Low temperature coefficient
- Galvanic isolation
- High immunity to external interference
- Excellent linearity
- Light weight design




The OPUS-C-1500M3 is an open-loop current sensor designed for the accurate measurement of DC, AC, pulsed currents, and arbitrary waveform currents. It ensures galvanic isolation between the primary and secondary circuits, making it ideal for applications where precision and safety are paramount.

Its rectangular shape allows it to be integrated into the smallest spaces, making it suitable for busbars with dimensions up to 64 mm x 21 mm.

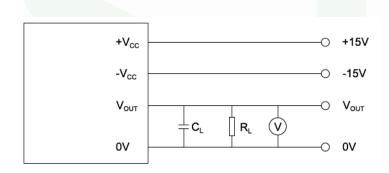

## **Applications :**

- DC motor drives
- Inverter and variable frequency drives (VFD)
- Uninterruptible power supplies (UPS)
- Power supplies for welding application
- Switching power supplies

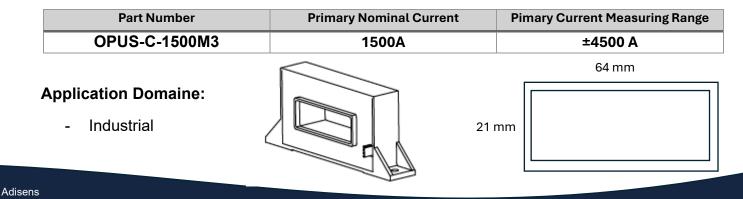



### **SPECIFICATIONS:**

## $T_{\text{A}}$ = +25°C , $V_{\text{CC}}$ = ± 15V , $R_{\text{L}}$ = 10 $\Omega$ , unless otherwise noted

Parameter	Symbol	Condition	Min	Тур	Мах	Unit
		ELECTRICAL DATA				
Primary nominal r.m.s Current	IPN			1500	-	A
Primary Current measuring range	Ірм		-4500	-	4500	A
Output Voltage	Vout	V <sub>OE</sub> + S × I <sub>P</sub> -		±4	-	mV
Sensitivity	S	Iр=0 То ± I <sub>PN</sub> -		2.67	-	mV/A
Supply Voltage	Vcc	±5% -		±15	-	V
Current Consumption	lc	IP=0 -		±25/-5	-	mA
Load Resistance	R∟	Ip=0 To ± I⊧N	1	10	-	ΚΩ
Load Capacitance	CL	Ip=0 To ± I⊧N	-	100	-	pF
	S	STATIC PERFORMANCE DATA				
Linearity Error	εL	T <sub>A</sub> = -40 °C to +105 °C, I <sub>P</sub> = 0 to ±I <sub>PN</sub>	-	±0.5	-	% Ipn
Accuracy	Xg	TA = +25 °C, IP = 0 to $\pm$ IPN	-1.2	±0.5	1.2	% Ipn
		TA = -40 °C to +105 °C, IP = 0 to $\pm$ IPN	-4.5	±1.5	3.5	
Sensitivity Error	Es	$T_A = -40 \text{ °C to } +85 \text{ °C, IP}$ $= 0 \text{ to } \pm \text{IPN}$	-3	-	3	%
Symmetry	Еѕүм	$T_A = -40 \text{ °C to } \pm 105 \text{ °C, IP}$ $= 0 \text{ to } \pm \text{IPN}$	99	100	101	%
Hysteresis	Vон	$ \mathbf{p} = \pm  \mathbf{p}_N \to 0$	-10	±5	10	mV
Electric Offset	Voe	TA = +25 °C, IP = 0	-25	±10	25	- mV
		TA = -40 °C to +105 °C, IP = 0	-40	±20	40	
	D	NAMIC PERFORMANCE DATA	A			1
Response Time	Tr	di/dt > 50 A/µs, 10% to 90% of IPN		5	-	μs
Bandwidth	BW	-3 dB	DC	25	-	kHz

Version 1.0 04.2024



## 2. TYPICAL OUTPUT CHARACTERISTICS

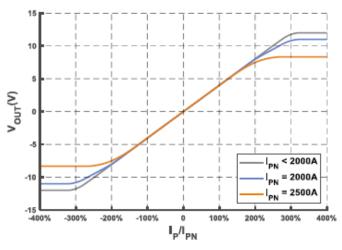
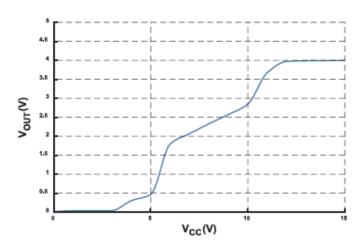
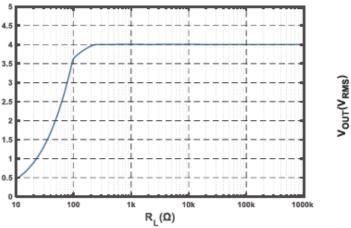



Figure 1. Output Voltage vs Primary Current





 



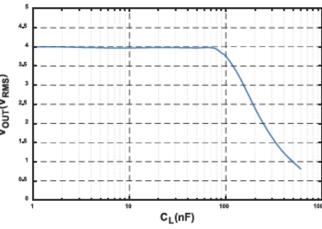


Figure 4. Output Voltage vs Load Capacitance  $(@I_P = I_{PN})$ 


V<sub>our</sub>(V)

sion 1.0

# **OPUS-C-1500M3**



# **Technical Specification**

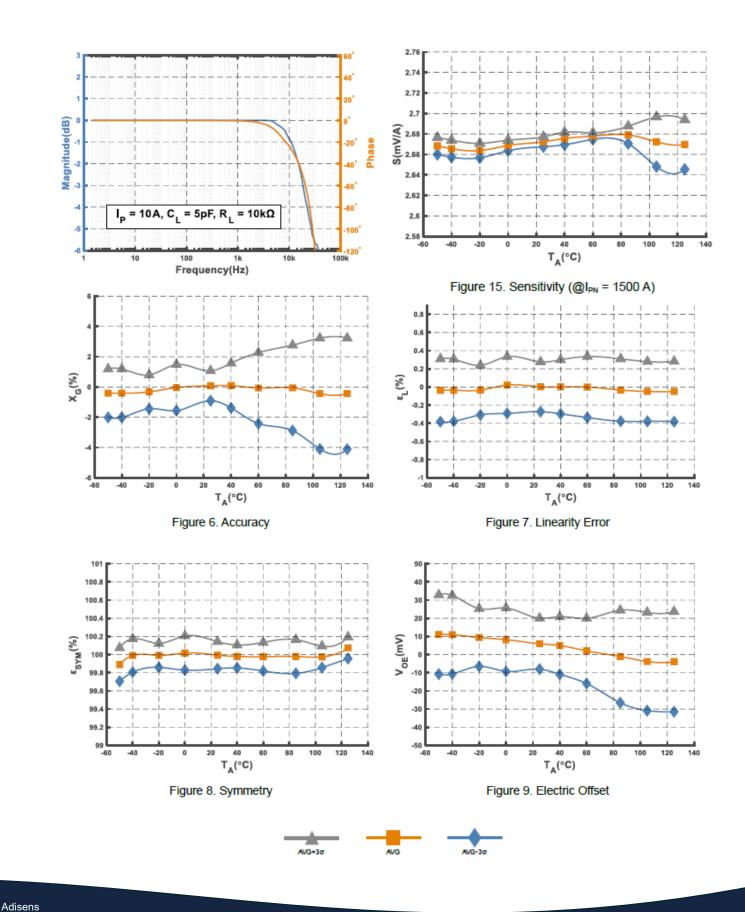



## 4. INSULATION AND ENVIRONMENTAL CHARACTERISTICS

Parameter	Symbol	Typical	Unit
Dielectric Strength	VD	5	kV(50Hz, 1min)
Insulation Resistance	Ris	1000	MΩ
Creepage Distance	dср	23	mm
Clearance	dc∟	14	mm
Ambient Operating Temperature	Та	-40 to +105	°C
Ambient Storage Temperature	Tstg	-40 to +105	°C
Mass	m	300	g

## **5.PARAMETERS DEFINITION AND FORMULA**

## 1) Output Voltage:

VOUT stands for current sensor output voltage at given primary current, VOE stands for electric offset, S stands for sensitivity, IP stands for primary current.

## 2) Accuracy

$$X_{G} = MAX_{IP \in [-IPN, IPN]} \qquad V_{OUT} - (S \times IP) \qquad X \quad 100\%$$
$$S \times IPN$$

IPN stands for nominal primary current

## 3) Sensitivity


 $S = V_{OUT(@ IPN)} - V_{OUT(@ -IPN)}$   $2 \times I_{PN}$ 


 $\mathsf{VOUT}(\texttt{@ IPN}) \text{ and } \mathsf{VOUT}(\texttt{@-IPN}) \text{ stand for the voltage output at IPN and -IPN respectively.}$ 







## 6. DIMENSIONS

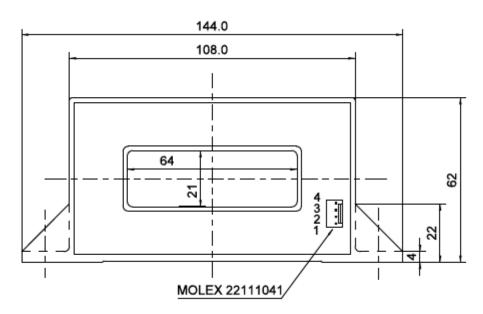

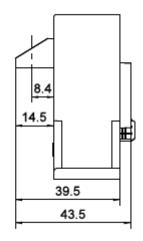

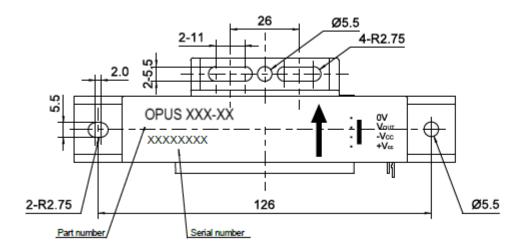

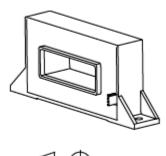

#### **Mounting Recommendation**

1. Mounting method:  $1 \times \Phi 5.5$  mm hole and  $1 \times \Phi 5.5$  mm slotted hole

- 2 × M5 copper or SS304 screws (Recommended torque 2.5 N·m) Or
- 1 ×  $\Phi$  5.5 mm hole and 2 ×  $\Phi$  5.5 mm slotted holes (Fixed to the busbar)
- 3 × M5 copper or SS304 screws (Recommended torque 2.5  $N{\cdot}m)$
- 2. Primary through hole dimensions: 64 mm × 21 mm
- 3. Secondary electrical connection: Molex 22041041 (old PN: Molex 5045-04A) Crimp Housing: Molex 22011042 Crimping Terminal: Molex 08500102

6

Adisens

/ersion 1.0 04.2024



#### 1. General Safety Warnings

- **Intended Use**: This transducer is designed for installation in electrical and electronic systems. It must be used in compliance with applicable international standards, such as **IEC 61010-1**, as well as local regulations and codes.
- **Applicable Standards**: The transducer must be operated according to the Adisens's operating instructions to ensure compliance with relevant safety standards, including:
  - o **IEC 61010-1**: Safety requirements for electrical equipment for measurement, control, and laboratory use.
  - EN 50178: Safety requirements for electronic equipment for power installations.
- Installation by Qualified Personnel: Only qualified professionals, trained in handling high-voltage systems and electrical components, should install, commission, and maintain the transducer. Misuse or incorrect installation may result in electric shock, fire, or severe equipment damage.

#### 2. Electrical Shock Risk

- **Risk of Electric Shock**: This transducer operates in high-voltage environments. It must be handled with care to avoid direct contact with live electrical components. There is a risk of serious injury or death from electric shock if proper precautions are not taken.
- Limited-Energy Secondary Circuits: To ensure safe operation, this transducer must be used exclusively within limited-energy secondary circuits, as specified by IEC 61010-1, which governs the safe design of electrical circuits to reduce the risk of injury and electrical hazards.
- **Isolation Requirements**: This transducer provides galvanic isolation between the primary (high-power) and secondary (low-power) circuits. However, the device should not be assumed to provide absolute protection against electric shock. Always de-energize circuits before installation or maintenance.

#### **3. Installation Precautions**

- Environmental Conditions: The transducer is designed to operate in controlled environments. Ensure that the operating temperature, humidity, and surrounding conditions comply with the transducer's specifications provided in the technical datasheet. Avoid exposure to moisture, corrosive environments, or areas prone to electrical interference.
- **Mounting**: Secure the transducer properly in a location that prevents movement or vibration during operation. Improper mounting may cause electrical arcing or contact with live components.
- **Grounding**: Ensure that the transducer is correctly grounded in accordance with the electrical system design. This will help prevent electric shock and improve system safety and performance.



#### 4. Operational Guidelines

- **Operating Limits**: Operate the transducer strictly within the specified voltage, current, and temperature ranges. Overloading the transducer beyond its rated capacity may result in equipment failure or create safety hazards.
- **Routine Maintenance**: Inspect the transducer regularly for signs of wear, damage, or abnormal operation. Discontinue use if any issues are detected and consult the manufacturer for replacement or repair.

#### 5. Handling and Storage

- **Handling Precautions**: Avoid direct contact with transducer terminals during handling. Always handle the device with protective gear, including insulated gloves, to avoid accidental electric shock.
- **Storage Conditions**: Store the transducer in a clean, dry, and temperature-controlled environment. Prolonged exposure to harsh conditions may degrade performance and compromise safety.

#### 6. Emergency Procedures

- **Power Disconnection**: In case of a malfunction, electrical fault, or other emergency, immediately disconnect the power supply to the transducer and seek professional assistance for inspection and repair.
- First Aid: If an electric shock occurs, follow established first aid protocols and seek emergency medical assistance immediately.

#### 7. Disposal

• Environmental Considerations: Dispose of the transducer according to local regulations for electronic waste. Do not incinerate, and avoid disposing of the device in general waste, as it may contain hazardous materials.

#### 8. Manufacturer's Support

For additional information, technical support, or to report any issues with the transducer, please contact un on <u>contact@adisens.fr</u>. Ensure that you have the model number, serial number, and installation details on hand for a prompt response.

Adisens