

### Hall Effect Voltage Sensor HEVS2000

### Features:

- High accuracy
- Very good linearity
- Easy installation
- Can be customized
- Low temperature drift
- High immunity to external interference
- Robust Design for Harsh Environments
- High Galvanic Isolation





The **closed-loop Hall Effect** mechanism compensates for magnetic field variations, providing high precision and low drift over time, even in fluctuating temperatures or challenging environmental conditions like dust, humidity, or high altitudes.



ensuring both safety and accuracy.





# Application Domaine:

- Railway
- Industrial

### Standards:

- IEC60950-1:2001
- EN50178:1981
- EN50155:2021
- EN60947-1:2004

### **Applications:**

Variable speed drives

Welding machine

Battery supplied applications

Uninterruptible Power Supplies

Electrochemical.

Substations.

Auxiliary converters

Part Number	Primary Nominal Voltage	Pimary Voltage Measuring Range		
HEVS2000	2000V	±4000 V		



### **Specifications:**


 $T_A = +25$ °C,  $V_{CC} = \pm 24$ V

Parameter	Symbol	Condition	Min	Тур	Max	Unit
Primary nominal r.m.s Voltage	VPN		-	2000	-	V
Primary Voltage measuring range	VPM		-4000	-	4000	V
Total Input Consumption	Рр		-	5.00	-	W
Rated Input Current	lp		-	5.00	-	mA
Turn Ration	Np/Ns		20000 / 2000			
Primary Resistance	Rp	@ TA = 25 ° C		400		ΚΩ
Secondary Coil Resistance	Rs	@+85° C	-	55	-	Ω
Rated Output	Isn	@Vp=±Vpn	-50	-	+50	mA
Measuring Resistance		@ ±15V	0	230	-	Ω
Supply Voltage	Vc	± 10%	±15	0	± 24	V
Consumpution Current			20 + Ip x ( Np/Ns)			mA
Offset Current		@Vp=0 TA=25°C	-	≤ ±0.2	-	mA
Offset Drift		@ -40~+85°C		≤ ±1.5		mV/° C
Linearity		@Vp=0~±Vpn		≤ 0.1		%FS
Overall Accuracy		@Vpn, TA = 25 °C		±0.5		%
Response Time				≤200		μ <b>S</b>
Galvanic Isolation		@50Hz, AC, 1min <sup>1</sup>		12.0		Kv
		@ 50HZ,AC,1min <sup>2</sup>		2.0		
Operating temperature			-40	-	+85	°C
Storage temperature			-40	-	+125	°C
Mass				850		g

- 1. Between primary and secondary + shield
- 2. Between secondary and shield



### **DIMENSIONS**

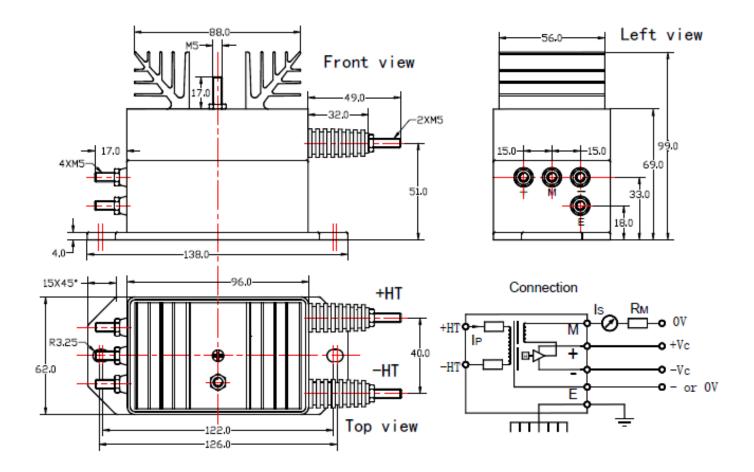

All dimensions are in : mm General Tolerance : ± 1mm

Primary connection: M5 threaded studs

Tightening torque : 2.2 N.m

Secondary connection: M5 threaded studs

Tightening torque : 2.2 N.m



### 1. General Safety Warnings

- **Intended Use**: This transducer is designed for installation in electrical and electronic systems. It must be used in compliance with applicable international standards, such as **IEC 61010-1**, as well as local regulations and codes.
- **Applicable Standards**: The transducer must be operated according to the Adisens's operating instructions to ensure compliance with relevant safety standards, including:
  - o **IEC 61010-1**: Safety requirements for electrical equipment for measurement, control, and laboratory use.
  - o **EN 50178**: Safety requirements for electronic equipment for power installations.
- **Installation by Qualified Personnel**: Only qualified professionals, trained in handling high-voltage systems and electrical components, should install, commission, and maintain the transducer. Misuse or incorrect installation may result in electric shock, fire, or severe equipment damage.

#### 2. Electrical Shock Risk

- **Risk of Electric Shock**: This transducer operates in high-voltage environments. It must be handled with care to avoid direct contact with live electrical components. There is a risk of serious injury or death from electric shock if proper precautions are not taken.
- Limited-Energy Secondary Circuits: To ensure safe operation, this transducer must be used exclusively within limited-energy secondary circuits, as specified by IEC 61010-1, which governs the safe design of electrical circuits to reduce the risk of injury and electrical hazards.
- **Isolation Requirements**: This transducer provides galvanic isolation between the primary (high-power) and secondary (low-power) circuits. However, the device should not be assumed to provide absolute protection against electric shock. Always de-energize circuits before installation or maintenance.

#### 3. Installation Precautions

- Environmental Conditions: The transducer is designed to operate in controlled environments. Ensure that the operating temperature, humidity, and surrounding conditions comply with the transducer's specifications provided in the technical datasheet. Avoid exposure to moisture, corrosive environments, or areas prone to electrical interference.
- **Mounting**: Secure the transducer properly in a location that prevents movement or vibration during operation. Improper mounting may cause electrical arcing or contact with live components.
- **Grounding**: Ensure that the transducer is correctly grounded in accordance with the electrical system design. This will help prevent electric shock and improve system safety and performance.



### 4. Operational Guidelines

- **Operating Limits**: Operate the transducer strictly within the specified voltage, current, and temperature ranges. Overloading the transducer beyond its rated capacity may result in equipment failure or create safety hazards.
- **Routine Maintenance**: Inspect the transducer regularly for signs of wear, damage, or abnormal operation. Discontinue use if any issues are detected and consult the manufacturer for replacement or repair.

### 5. Handling and Storage

- **Handling Precautions**: Avoid direct contact with transducer terminals during handling. Always handle the device with protective gear, including insulated gloves, to avoid accidental electric shock.
- **Storage Conditions**: Store the transducer in a clean, dry, and temperature-controlled environment. Prolonged exposure to harsh conditions may degrade performance and compromise safety.

### 6. Emergency Procedures

- **Power Disconnection**: In case of a malfunction, electrical fault, or other emergency, immediately disconnect the power supply to the transducer and seek professional assistance for inspection and repair.
- **First Aid**: If an electric shock occurs, follow established first aid protocols and seek emergency medical assistance immediately.

### 7. Disposal

• **Environmental Considerations**: Dispose of the transducer according to local regulations for electronic waste. Do not incinerate, and avoid disposing of the device in general waste, as it may contain hazardous materials.

### 8. Manufacturer's Support

For additional information, technical support, or to report any issues with the transducer, please contact un on <a href="mailto:contact@adisens.fr">contact@adisens.fr</a>. Ensure that you have the model number, serial number, and installation details on hand for a prompt response.